
# **Package Contents**





# **System Requirements**

- Linux, Mac OS X, or Microsoft Windows 7/8/10
- Java Runtime Environment 1.6 (1.8 or newer recommended)
- Web Browser: Google Chrome (Other browsers may have limited functionality.)
- UniFi Controller software v5.12.x (or newer), available at: ui.com/download/unifi

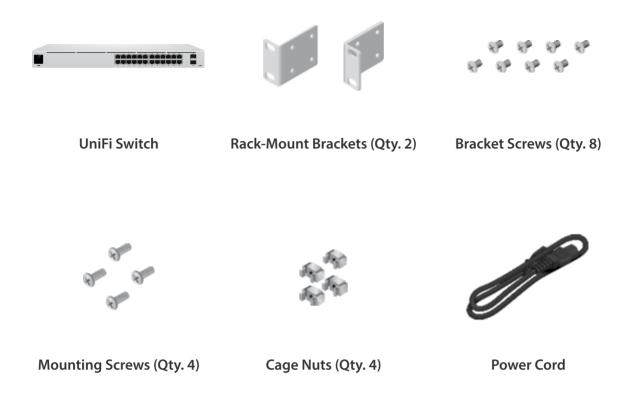

### **Hardware Overview**

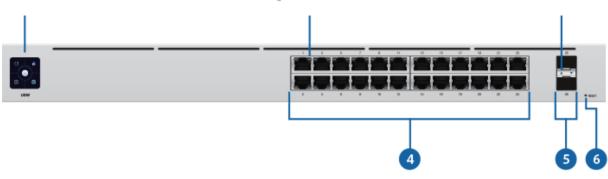



1 Touchscreen Display		
<b>Bootup Animation</b>	Initializing.	
Steady White	Factory defaults, waiting for adoption.	
Steady Blue	Successfully adopted by a network and working properly.	
Location Animation	This indicates that you clicked Locate in the UniFi Controller software. The software will also display the location of the device on the map.	
2 RJ45 Speed/Link/Activity LED (Ports 1 - 24)		
Off	No Link	
Amber	Link Established at 10/100 Mbps Flashing Indicates Activity	
Green	Link Established at 1000 Mbps Flashing Indicates Activity	
3 SFP Link/Activity LED (Ports 25 - 26)		
Off	No Link	
Green	Link Established at 1 Gbps Flashing Indicates Activity	
4 RJ45 (Ports 1 - 24)		



Hot-swappable SFP ports support 1 Gbps connections.

6 Reset Button

This button serves two functions for the UniFi Switch:

- Restart Press and release the Reset button quickly.
- Restore to Factory Default Settings Press and hold the Reset button for more than five seconds.
- Power Port

Connect the included Power Cord to the Power port.

# **Installation Requirements**

- Phillips screwdriver
- Standard-sized, 19" wide rack with a minimum of 1U height available
- For indoor applications, use Category 5 (or above) UTP cabling approved for indoor use.
- For outdoor applications, shielded Category 5 (or above) cabling should be used for all wired Ethernet connections and should be grounded through the AC ground of the power supply.


We recommend that you protect your networks from harmful outdoor environments and destructive ESD events with industrial-grade, shielded Ethernet cable from Ubiquiti. For more details, visit: ui.com/toughcable




Note: Although the cabling can be located outdoors, the UniFi Switch itself should be housed inside a protective enclosure.

## **Hardware Installation**

1.

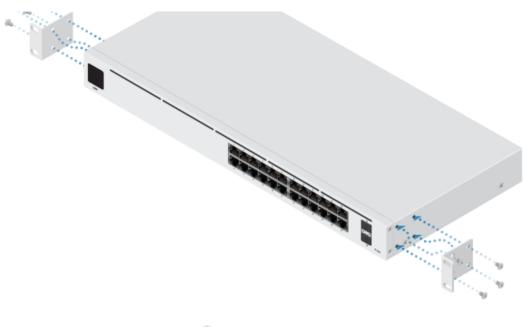


2.

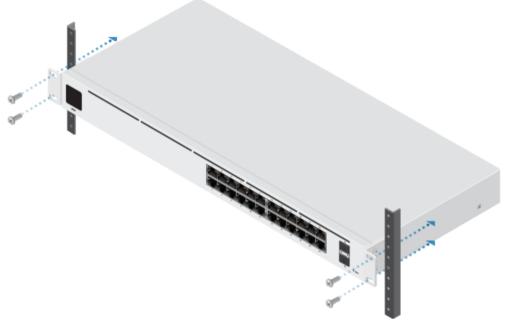

OR

**USW-24 Quick Start Guide** 

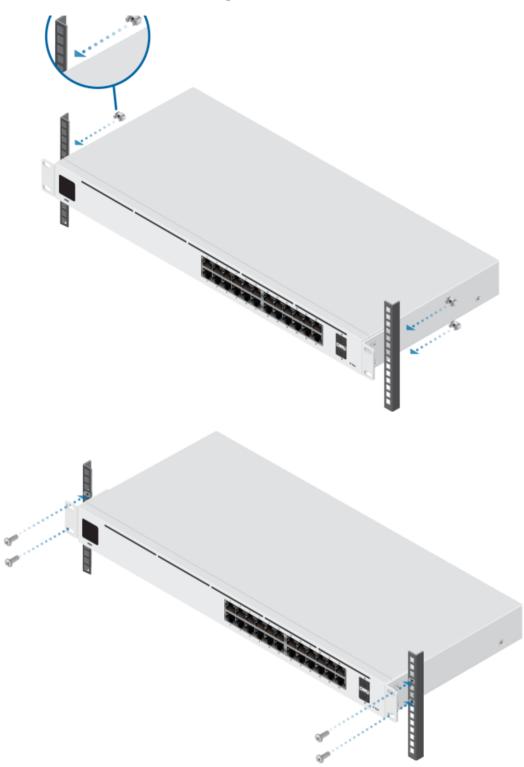

**Connecting Power** 



# **Connecting Ethernet**




# **Connecting SFP**


1.



2.

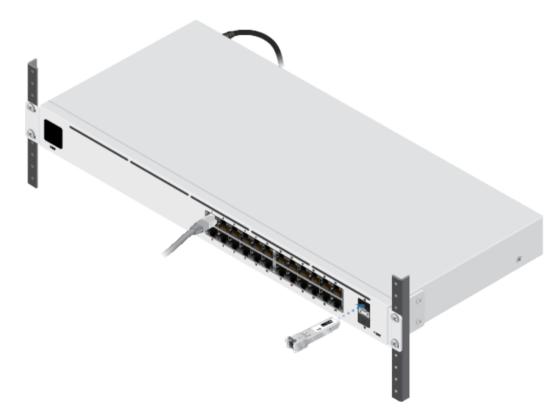

3.

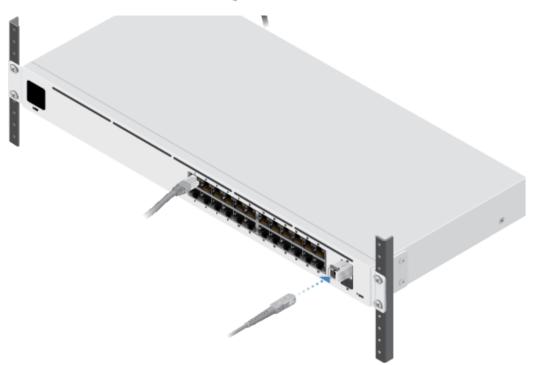

For information about compatible fiber SFP modules, visit: ubnt.link/UniFi\_SFP\_DAC\_Compatibility

### **Software Installation**

Download and install the latest version of the UniFi Controller software at ui.com/download/unifi and follow the on-screen instructions.



Note: If you already have UniFi Controller v5.12.x or newer installed, skip to "Adopting the UniFi Switch".

After you have installed the software and run the UniFi Installation Wizard, a login screen will appear for the UniFi Controller management interface. Enter the admin name and password that you created and click Sign In.




You can manage your network and view network statistics using the UniFi Controller management interface.

To adopt the UniFi Switch, proceed to "Adopting the UniFi Switch".


For information on configuring and using the UniFi Controller software, refer to the User Guide on the website: ui.com/download/unifi

## **Adopting the UniFi Switch**

1. From the UniFi Controller dashboard, click Devices in the left menu bar.

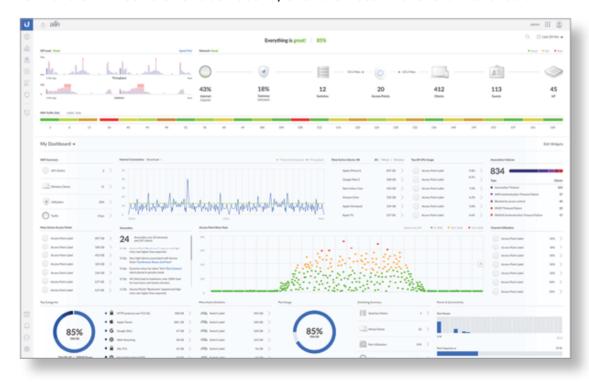

2. On the Devices screen, locate the UniFi Switch in the list of devices under the Model column. To adopt the UniFi Switch, click Adopt.

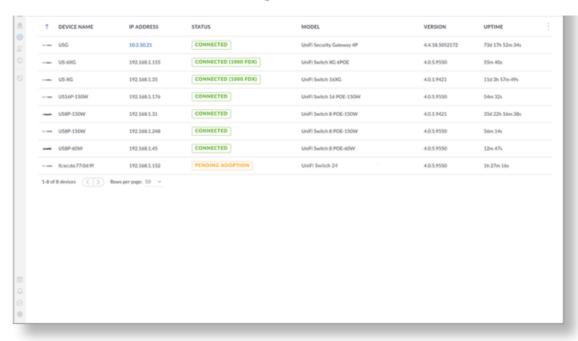

3. The display will turn blue to confirm that the UniFi Switch has been successfully adopted.

# **Specifications**

USW-24	
Dimensions	442.4 x 200 x 43.7 mm (17.42 x 7.87 x 1.72")
Weight	2.70 kg (5.95 lb)
With Rackmount Brackets	2.79 kg (6.15 lb)
Interfaces	
Networking	(24) 10/100/1000 RJ45 Ports
	(2) 1G SFP Ethernet Ports
Management	Ethernet In-Band
Power Method	100-240VAC, 50/60 Hz, Universal Inpu
Power Supply	AC/DC, Internal, 36W
Supported Voltage Range	100 to 240VAC
Max. Power Consumption	25V
LEDs	
RJ45 Data Ports	Speed/Link/Activity
SFP Data Ports	Link/Activit
ESD/EMP Protection	Air: ± 16 kV, Contact: ± 12 kV
Shock and Vibration	ETSI300-019-1.4 Standard
Operating Temperature	-5 to 45° C (23 to 113° F
Operating Humidity	10 to 90% Noncondensing

CE, i CE, i

# **Safety Notices**

- 1. Read, follow, and keep these instructions.
- 2. Heed all warnings.
- 3. Only use attachments/accessories specified by the manufacturer.



WARNING: Failure to provide proper ventilation may cause fire hazard. Keep at least 20 mm of clearance next to the ventilation holes for adequate airflow.



WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.



WARNING: Do not use this product in location that can be submerged by water.



WARNING: Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

# **Electrical Safety Information**

- 1. Compliance is required with respect to voltage, frequency, and current requirements indicated on the manufacturer's label. Connection to a different power source than those specified may result in improper operation, damage to the equipment or pose a fire hazard if the limitations are not followed.
- 2. There are no operator serviceable parts inside this equipment. Service should be provided only by a qualified service technician.
- 3. This equipment is provided with a detachable power cord which has an integral safety ground wire intended for connection to a grounded safety outlet.
  - a. Do not substitute the power cord with one that is not the provided approved type. Never use an adapter plug to connect to a 2-wire outlet as this will defeat the continuity of the grounding wire.
  - b. The equipment requires the use of the ground wire as a part of the safety certification, modification or misuse can provide a shock hazard that can result in serious injury or death.
  - c. Contact a qualified electrician or the manufacturer if there are questions about the installation prior to connecting the equipment.
  - d. Protective earthing is provided by Listed AC adapter. Building installation shall provide appropriate short-circuit backup protection.
  - e. Protective bonding must be installed in accordance with local national wiring rules and regulations.

# **Limited Warranty**

ui.com/support/warranty

# **Compliance**

#### **FCC**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operations of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### **ISED Canada**

CAN ICES-3(A)/NMB-3(A)

### Australia and New Zealand



Warning: This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

### **CE Marking**

CE marking on this product represents the product is in compliance with all directives that are applicable to it.



## **WEEE Compliance Statement**

# **Declaration of Conformity**

### **Online Resources**









© 2020 Ubiquiti Inc. All rights reserved.